


# SEDIMENT DEWATERING FILTERS Installation & Usage



Insert pump hose to dashed line marked on the filter.

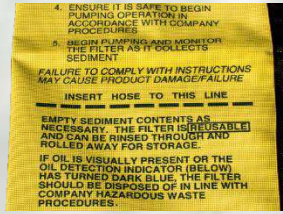

Secure collar with reusable cable ties provided. Tighten to 2/3 width of hose. Check once pumping starts and tighten/ loosen as required.



Position filter near a suitable drainage point



**Stop pumping** if hydrocarbon indicator turns dark blue. Water is contaminated with oil or fuel. Clean up spill before continuing.

## SEDIMENT FILTER

- Holds up to 20kg sediment
- Filters to 150µm
- 450L/min
- Reuse up to 20x

## SEDIMENT XL FILTER

- Holds up to 40kg sediment
- Filters to 150µm
- 800L/min
- Reuse up to 20x

## Filter Emptying & Reuse

Filter needs to be emptied when full. If not, bag may split. Finer silts may clog filter before capacity is reached. Empty filter in a suitable place and reuse up to 20 times.

**During use, watch for the following signs:**

- Flow of water from filter has slowed
- Filter bag looks packed
- Water coming through top of collar

**TIP:** Flush out between uses if silt clogging filter.

SEDIMENT



SEDIMENT XL



OIL & SEDIMENT



ULTRA-FINE



MANIFOLD

